
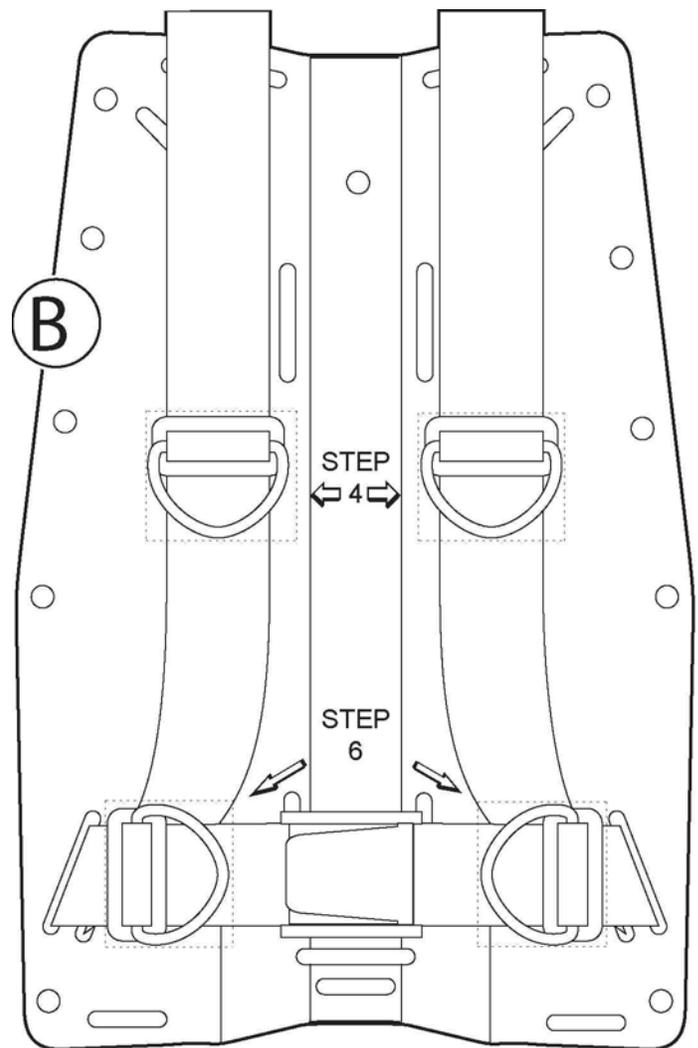
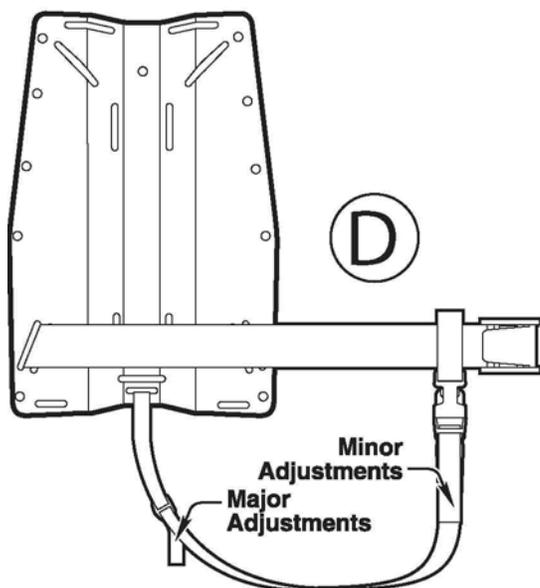
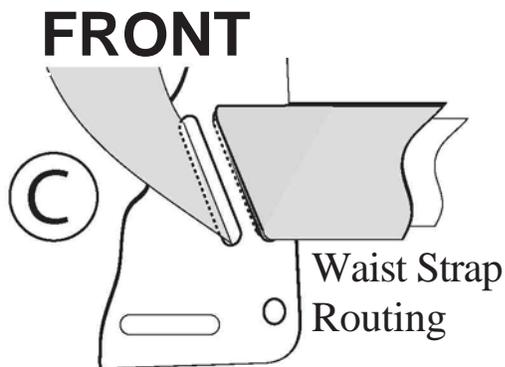


Handheld CO2 Jet Threading Basic Harness

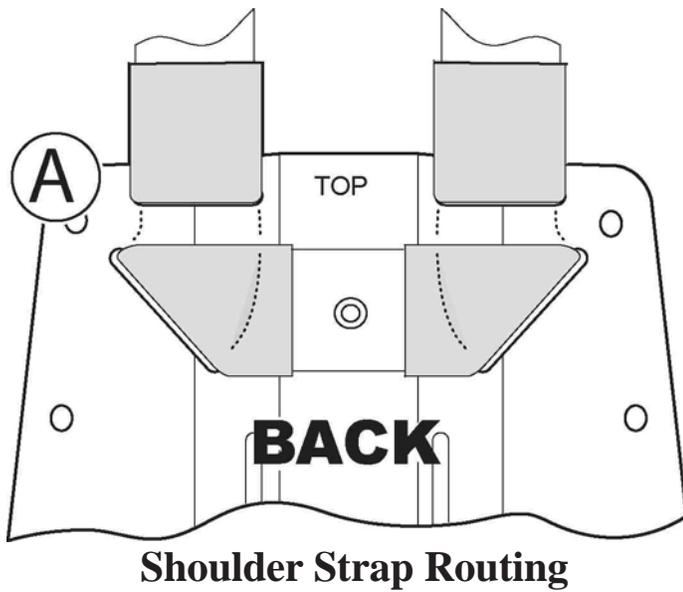

- 1) Begin by threading 2 tubular sleeves onto the harness webbing. These will end up where the harness goes through the upper shoulder strap slots, as shown in figure A.
- 2) Thread the harness webbing through the upper shoulder strap slots (figure A), positioning the webbing so the grommet is over the upper tank bolt hole on the plate.
- 3) Thread the remaining 2 tubular sleeves onto the harness webbing, ending up where the harness goes through the waist slots, as shown in figure C.
- 4) Install one 2" belt-slide and one 2" bend D-ring on each side of the webbing, as shown in figure B.
- 5) Then thread one tail of the webbing through the waist slot (back through the inner slot, then forward through the outer slot). Repeat this step for the opposite tail (see figure C).
- 6) Again install one 2" belt-slide and one 2" D-ring on each side of the webbing, as shown in figure B.
- 7) Locate and install crotch strap (NOT INCLUDED)
- 8) Using same side as the crotch strap loop, install waist strap release buckle using slots on buckle.